



Centrifuge



Model XC-1000

Operating Manual

Before using this product, please read this manual carefully to learn about the available features to obtain the best results of this equipment.

Warning: To prevent fire or shock hazard, do not expose this unit to rain or moisture. Unless labeled otherwise, this equipment should be used with AC 110V 60Hz in the USA or Canada.

220V 50Hz available as Model No. **XC-1000-220**

Caution: No user-serviceable parts inside. Refer servicing to qualified service personnel

1.1 Table of Contents

Section

• Table of Contents	Page 1
• Safety	Page 2
• Contents/Accessories	Page 3
• Specifications	Page 4
• Notes of Operations	Page 5
• Control Panel/Setup	Page 6
• Operations	Page 7
• Warranty	Page 8



2.1 Safety

Before using the centrifuge, please read this instruction manual carefully. Incorrect or inappropriate use may result in equipment damage or personal injury!

This centrifuge is designed for clinical medicine, biology, genetic engineering, immunology, etc.

When the centrifuge is running (rotor is spinning), Please keep an area of about 12 inches around the centrifuge clear while operating it and ensure nothing is blocking the vents.

To avoid injury to personnel and or separated samples inside the unit; do not use the following materials in the centrifuge:

- Flammable and explosive materials
- Strong chemical materials
- Toxic or radioactive materials

3.1 Contents


Number	Name	Qty	Note
1	Centrifuge	1set	
2	Rotor (included) Capacity =< 10-15mL x 6 tube holders	12pc	(six included inside unit & six extra)
3	Black silicone tube cushions	6pc	
4	Fuse	1pc	4 AMP
5	Operating manual	1pc	



Upon receipt, please examine the package, if there's anything wrong, please kindly contact your dealer promptly.

3.2 Accessories

If you need optional auxiliary parts, please contact our company or authorized dealers.

Item #01	Description	Number of pieces	Image
XC-06	Replacement tube holders	Set of 6 pcs	


4.1 Specifications

Function/ Parameter	Technical Data
Environment of use	<ul style="list-style-type: none"> • Clean, dry and flat surface • Stable work surface • Altitude: • Relative humidity:≤80%
Ambient Temperature	<ul style="list-style-type: none"> • +5°C~-40°C
Applicable Voltage	<ul style="list-style-type: none"> • AC110V 60Hz or 220V 50Hz
Setting Time Range	<ul style="list-style-type: none"> • 1~60min
Maximum RPM	<ul style="list-style-type: none"> • 4000 r/min
Maximum relative centrifugal force (RCF)	<ul style="list-style-type: none"> • 1790xg
Rotor Length	<ul style="list-style-type: none"> • 5 cm
Radius	<ul style="list-style-type: none"> • 10 cm
Maximum capacity	<ul style="list-style-type: none"> • 15mL x 6
Noise (maximum speed)	<ul style="list-style-type: none"> • ≤70dB
Dimensions (machine)	<ul style="list-style-type: none"> • 11 x 11.5 x 10 in. (28 x 29 x 25 cm.)
Net Weight	<ul style="list-style-type: none"> • 9 lbs
Dimensions (package)	<ul style="list-style-type: none"> • 12 x 12 x 11 in. (32 x 32 x 28 cm.)
Gross Weight	<ul style="list-style-type: none"> • 11 lbs

5.1 Notes of Operation

- Ensure the rotor is tightened before running the centrifuge.
- Do not open the lid while the rotor is spinning. Allow centrifuge to come to a complete stop before attempting to open lid and remove specimen tubes.
- Use only with accessories provided or parts designed specifically for use with this model.
- Do not use centrifuge when the door is open.
- Make sure the specimen tubes are equal and balanced. (Unbalanced tubes will cause the machine to shake and not produce a smooth spinning motion).
- Before use check rotor. Cease use if there is obvious corrosion or damage signs on the rotor.

6.1 Control Panel

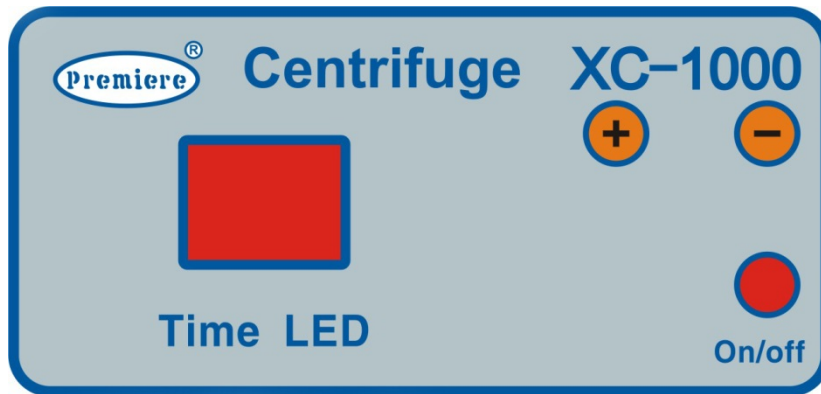

Control Panel

Time LED : Time in min

+ - : increase/decrease time

On/Off : run/stop

6.2 Setup

1. Open box and remove centrifuge from packaging
2. Place centrifuge onto flat surface
3. Open lid and remove foam packaging inside
4. Plug Power cord from back of unit into power supply, unit will power up and your centrifuge is ready for use.

7.1 Operations

Time Adjustment

1. Push the “+” or “-” button to adjust the time setting. To increase the run time push the “+” button until desired time reached or maximum of 60 minutes. (See section 6.1). To decrease the run time push the “-” button until desired time reached or minimum of 1 min. (See section 6.1). If the numbers under “TIME LED” are not Lite, make sure power cord is completely plugged into socket.

Spinning Centrifuge

2. Insert the centrifuge tubes in a manner that will balance the specimen tubes’ weight. Always insert an even number of tubes on opposite sides of the rotor with approximately the same amount of specimen in each tube.

Now that the desired time is selected, you can now run your samples.

1. Make sure lid is closed and locked.
2. Press the “On/Off” button, and centrifuge will begin spinning.
3. After the centrifuge has run for the programmed amount of time unit will begin to decelerate and come to a complete stop. Please note that the lid should never be opened until centrifuge has come to a complete stop.

Note

This centrifuge lid is designed to automatically stop when the lid is open. If you have any problems operating the centrifuge, please contact your dealer or authorized provider.

Upon receipt of your new centrifuge

we recommend you record the following information for future reference:

Date purchased/received: _____

Dealer: _____

Dealer's phone number: _____

Warranty

The manufacturer warrants this instrument to be free from defects in material and workmanship under normal use for 1 year from the date of purchase. It does not cover damage resulting from abuse or misuse, repairs or alterations performed by unauthorized repair technicians, or damage occurring in transit. If you have questions concerning this product or warranty, contact the dealer from whom it was purchased. For warranty service, product should be well packed to avoid damage in transit, preferably in original box and packing. Include your complete return address and telephone number as well as a description of the difficulty, date and place of purchase, and ship to the address below. If under warranty it will be repaired or replaced at no charge and returned. If misuse, alterations, accident or abnormal conditions of operation caused failure, an estimate for repairs will be provided for your approval prior to work being performed.

E1 v.2 © 2015

**Premiere Service Department
7241 Gabe Court
Manassas, VA 20109-2434**